


Location and Seating Pins

Flat Type Form A / Seating Pin / DIN 6321

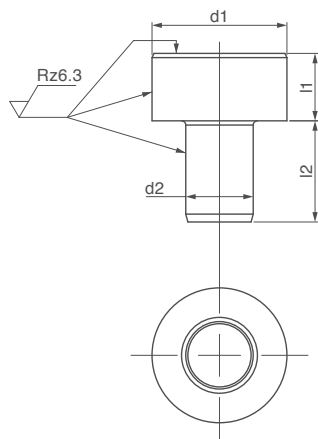

MATERIAL

/ Tool steel hardened and ground

ORDERING INSTRUCTIONS

Advise ref and l1 size short or long.

Note: add suffix S or L to reference. (eg. LPR1-3622 s)

/ l₁ = h9 and can be used at a bearing surface in jigs.

/ Location pins are used to locate work pieces and fixtures or as stops.



DIN 6321

REF	d1 g6	l1	l2	d2 n6
SP1-3622	6	5	6	4
SP2-3622	10	6	9	6
SP3-3622	16	8	12	8
SP4-3622	25	10	18	12